



FIG. 3  
DRIVING AXLE AND FREEWHEEL ASSEMBLY

NO. IN SET	PART NO.	NAME OF PART
		<b>DRIVING AXLE AND FREEWHEEL SECTION.</b>
		Illustration, Fig. 3, Page 40.
		Included in the above :
2	DA 1731 H	Assy. of Rim and Centre.
2		400×12 Traction Grip Tyres.
2		Inner Tubes for 400×12 Tyres.
1	DA 1559 Q	L.H. Freewheel Assembly } each
1	DA 1558 Q	R.H. Freewheel Assembly } comprising :-
1	DA 1276 Q	Freewheel Housing } Riveted Together
3	DA 1277 T	Stud for housing } DA 1275 Q.
1	DA 1416 Q	Freewheel Hub.
3	DA 1520 T	Pawl.
3	DA 1418 T	Freewheel Pin.
1	DA 1283 T	Cover Plate.
4	19 P 1- $\frac{5}{8}$ "	$\frac{1}{4}$ " B.S.F.× $\frac{5}{8}$ " long Countersunk Screws for cover plate.
3	27 P 3	$\frac{3}{4}$ " Spring Washers for Wheel Stud.
3	22 P 3	$\frac{3}{4}$ " B.S.F. Bright Steel Nuts for Wheel Stud.
1	31 P	90° Angle Grease Nipple for Freewheel Housing.
1		Setscrew for Freewheel Hub, $\frac{5}{16}$ " B.S.F. "Unbrako" $\frac{3}{4}$ " long.
1	DA 1526 Q/1	Propeller Shaft (30" long).
2		Collars for Propeller Shaft 1" bore× $1\frac{1}{8}$ " o.d.×11/16" wide.
2		Setscrews for Collars, $\frac{5}{16}$ " B.S.F. "Unbrako" $\frac{3}{4}$ " long.
2	DA 1832 H	Wheel weights.
6		$\frac{3}{8}$ " B.S.F.× $3\frac{3}{4}$ " long High Tensile Bolts.
6		$\frac{3}{8}$ " B.S.F. High Tensile Nuts.
6	27 P 3	$\frac{3}{8}$ " Spring Washers.

IMPORTANT.— When ordering spare parts, see instructions on page 32.