

MECHANISED GARDENING
GREAT GRANSDEN
SANDY, BEDS.
TEL. GT. GRANSDEN 200/255

SIMAR ROTOTILLER 35 and 56 - Standard Information

We regret that no Instruction books are available, but we can supply a photocopy of the Master Spares Breakdown for £1.85

A few simple points on running are as follows:

To time the ignition mark the flywheel at top dead centre, then make a mark on the flywheel 2.675" (RO 56) or 2.5" (RO 35) in a clockwise direction, rotate the flywheel anti clockwise until the second mark coincides with the top dead centre mark on the housing. This is the first point of break.

Petrol Oil Mixture 16 - 1. 2 or 3 star petrol to SAE 30 or SAE 40 oil.

Drain plug under crankcase to remove surplus mixture.

Transmission Oil. SAE 140 to be used in the gearbox. Gearbox oil to be checked when the gearbox is level with the ground.

The spark plug is catalogue number 2747 Lodge CV Cintox.

Leave the machine tipped on its nose when not in use.

There is a short and a long peg on a chain inserted in the wheel hubs.

With the long peg in the left - LOW speed is engaged.

With the long peg half out - THE WHEELS ARE FREE.

All spares are available.